 


CALM WINDS 2.60%
MISSING .27%



WIND SPEED CLASS BOUNDARIES
(METERS/SECOND)

NOTES:
DIAGRAM OF THE FREQUENCY OF OCCURRENCE OF EACH WIND DIRECTION. WIND DIRECTION IS THE DIRECTION FROM WHICH THE WIND IS BLOWING. EXAMPLE - WIND IS BLOWING FROM THE NORTH 3.1 PERCENT OF THE TIME

REV	DATE	DES	REVISION DESCRIPTION	GIS	CHK	RVW

SOUTH HEART COAL LLC
SOUTH HEART LIGNITE MINE
SOUTH HEART, NORTH DAKOTA



Wind Rose for the Dickinson Municipal Airport Station

	DESIGN	TRC	08/18/2005	FILE	Fig2_2_4_20JAN10.xls
	GIS	AM	01/20/2010	<p>FIG 2.2-3</p>	
	CHECK	AJR	01/20/2010		
	REVIEW	RLK	01/20/2010		